

sovboi

USER MANUAL

E30Max Smart Video Projector

See, Feel, Enjoy, with Sovboi



🌐 <https://sovboi.com>

✉️ support_us@sovboi.com

✉️ support_jp@sovboi.com

250530



Scan QR code to activate **3-year warranty** & verify product authenticity. Issues? Contact: <https://sovboi.com>

QRコードをスキャンして、3年間の保証を有効化し、製品の正規性をご確認ください。ご不明な点がございましたら、<https://sovboi.com>までお問い合わせください。



..... **001-016**



..... **001-016**

CONTENTS

TROUBLE SHOOTING	001
CHECKING THE PACKAGE	003
FUNCTIONS OF EACH PART OF THE PROJECTOR	004
FUNCTIONS OF EACH PART OF THE REMOTE CONTROL	005
QUICK START GUIDE	006
PROJECTOR IMAGE SETTINGS	007
INPUT SIGNAL SWITCHING	008
PROJECTOR INSTALLATION AND PROJECTION DISTANCE	009
APP UP-DOWN AND SETTINGS	010
PROJECTOR IMAGE ADJUSTMENT FUNCTION	013
WIRELESS CONNECTIVITY	015
PROJECTOR SPECIFICATIONS	016



SOVBOI Professional Support

Engineered for Excellence

Quality & Authenticity

*** 100% Factory Certified**

Every E30Max projector undergoes rigorous 12-stage performance and safety inspections.

*** Authorized Seller Guarantee**

Warranty valid only through SOVBOI Certified Sellers.

Not sure about the authenticity? Please scan the QR code to activate the warranty to verify the authenticity.

Fast & Reliable Support

Any issues? We resolve 90% of cases in within 4 hours.

1. Scan for Instant Help



(Prefer direct contact? Use the email below.)

2. Priority Email Support

Contact: support_us@sovboi.com

Template:

Subject: "E30Max Support - [Order Number]"

Text: Country Code + Brief Issue Description(e.g., *US | No Signal*)

Your Feedback, Our Commitment

*** Suggest Features**

Propose upgrades - Directly reviewed by our engineering team.

*** Share Your Setup**

Tag #E30Max on social media - Featured users receive exclusive perks.

SOVBOI After-Sales Guide

Your Quick Problem-Solving Companion

1. Projector Tutorials: Video Guides

Scan for step-by-Step Demos



2. Dedicated Support Team

For immediate assistance:

Primary channel: Visit www.sovboi.com > [Contact Support]
(15-min average response | Ticket tracking system)

Alternative channel: Email support_us@sovboi.com

(12-hour SLA | 90% first-contact resolution)

Email Template:

Subject: E30Max Support - [Order Number]

Text: Country Code + Issue Description (e.g., Us | Blurry Image)

Sovboi

Activate your 3-year warranty!

Scan the QR code to access the official website and registration
will take just one minute!

Please register your warranty within 7 days of purchase.



No subscription required



90-day free replacement



Priority customer support



Step-by-step video guide



<https://sovboi.com>



Support_us@sovboi.com



TROUBLE SHOOTING

Q. Does the projector support accessing the Google Store?

A: The projector supports Google Store and can freely download apps supported by Google Store.

Q. The copyrighted content from Hulu, Netflix, and similar services can not be mirrored or cast.

A: This projector offers a range of pre-installed streaming apps that are officially licensed. You can go to the homepage > Apps, search for the app, and log in to your account to play the content. For casting, refer to the "Google Cast" section.

Q. Blurry Image

A: ① Adjust the focus/keystone.
② The projector and screen/wall must be in an effective distance.

Q. Why doesn't the remote control work?

A: ① Please make sure you have installed two AAA batteries in the remote control.
② Avoid mixing new batteries with old ones in the remote control as this can result in insufficient power supply and operation issues.

Q. Can I sideload Android Apps onto the projector?

A: Sorry, you cannot sideload Android apps onto the projector.

Q. Auto Focus/Auto Keystone is not working.

A: Please restore the projector to factory settings and try again, if the issue still persists, please send a video to our service team by email for assistance

Q. The picture is not bright enough.

A: To enjoy the best viewing experience, we suggest using it in a dark environment. The darker the room, the better the image.

Q. How can I set the interface language?

A: To set the interface language, simply press the  button on your remote control. Then, navigate to Device Preference in the menu. Under this section, select Language, where you can choose your desired language from the available options.

Q: The remote control is missing. Can you send it to me?

A: If any accessories are missing from the package, please contact us at the email address below and let us know what item is missing. We will get back to you as soon as possible. Email: support_us@sovboi.com

Q: I can't connect to my soundbar. What should I do?

A: ① Please ensure you have followed the correct connection steps, and make sure the soundbar is not currently connected to another device.

② Due to the wide variety of Bluetooth speakers on the market, some models may be incompatible with our projector (this is a common industry issue). We are actively working to improve compatibility. For detailed troubleshooting steps, please contact us via email.


Q: How do I check for initial defects?

A: If you notice any unusual issues—such as the projector suddenly failing to play videos, distorted images, increased fan noise, failure to power on, or unexpected shutdowns—please try initializing the projector first. This will reset the internal settings and may help resolve unexpected malfunctions. If the problem persists, please contact the seller. Most sellers respond within 24 hours, so you can rest assured.

Q: I contacted customer service but haven't received a reply.

A: We typically respond within 24 hours, but sometimes our email may be mistakenly filtered into your spam or junk folder. If you haven't received a reply after 24 hours, please check your spam folder or reach out to us again. You can also contact us directly via the "Contact Seller" option in your order history.


CHECKING THE PACKAGE

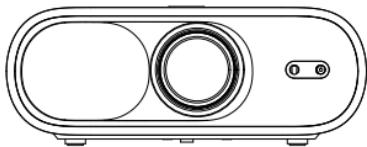

Projector



Remote Control

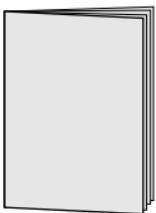

Operating Instructions




HDMI Cable




Power Cable

Things to note

recommendation

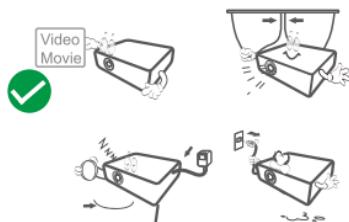


Improper use

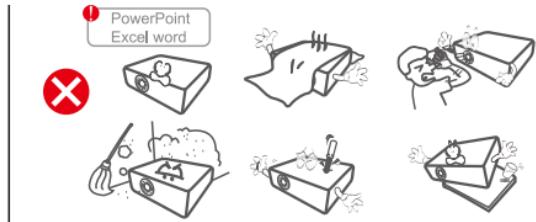


FUNCTIONS OF EACH PART OF THE PROJECTOR

Top View

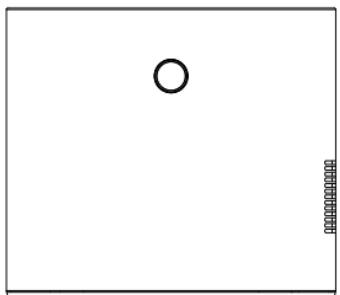


Front View

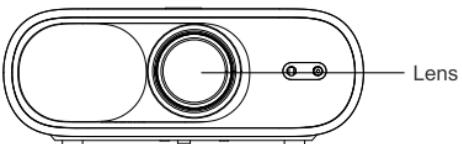

Power Supply

Rear View

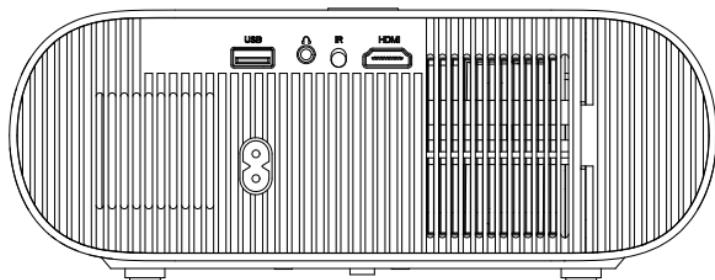

Power Supply



Headphones




HDMI



USB

FUNCTIONS OF EACH PART OF THE REMOTE CONTROL

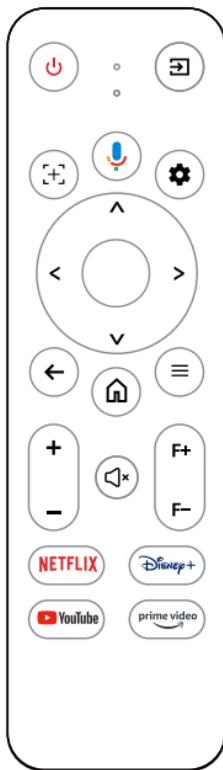


	Power Supply		Input Signal Switching
	Quiet Mode		YouTube
	Focus Adjustment		Netflix
	Voice Search		Prime video
	Move Back		Disney+
	Home		One-touch focus
	App Settings		Projection Settings
	Directional Buttons (up, down, left, right)		
	Volume Adjustment		

Installing the remote control


1. Please insert two AAA batteries into the remote control before using it.
2. Do not put new and old batteries together in the remote control.

QUICK START GUIDE

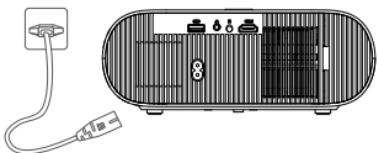



1. Plug the power cord into the outlet

2. Correct placement

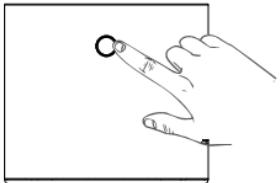

3. Press the power button to start the projector.

4. Press the " \leftarrow " and "Home" buttons on the remote control at the same time to pair the remote control.

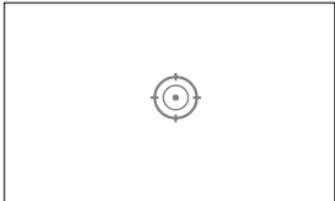

5. The projector will start autofocusing.





6. If you want to fine-tune it, press the focus button on the remote control to get the best effect.


PROJECTOR IMAGE SETTINGS

Projection Settings


Press the () button on the remote control, select "Projection" from the menu, and then choose the projection method based on your installation type.

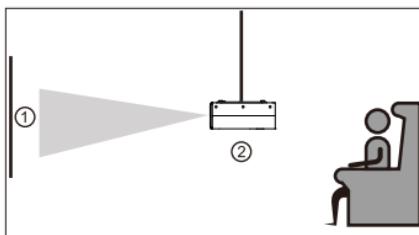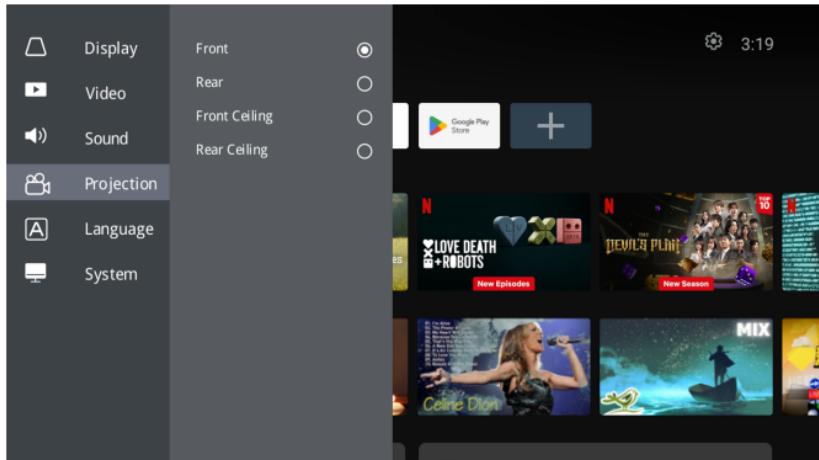


Front projection/ceiling mounting

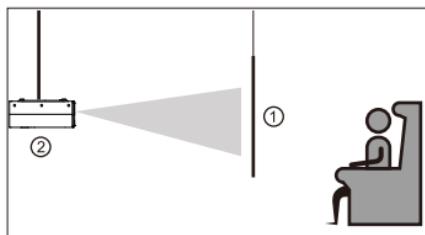

Rear projection/ceiling mounting

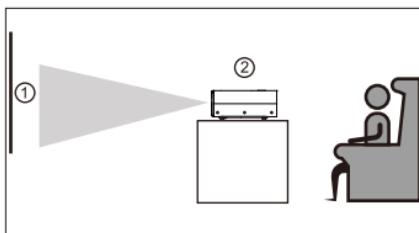

Front projection

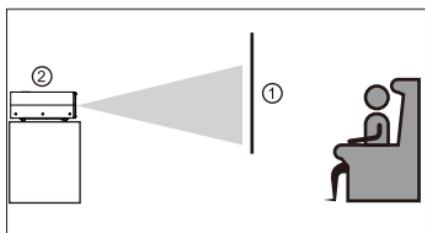


Rear projection



INPUT SIGNAL SWITCHING

Press the () button on the remote control and select the corresponding output terminal from the list that appears.

USB connection

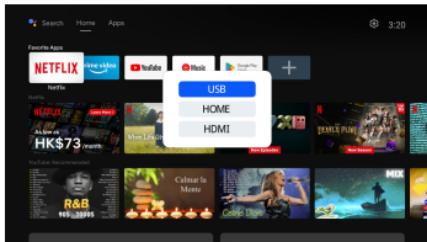


HDMI connection

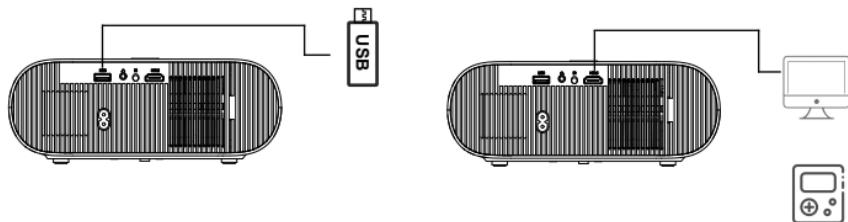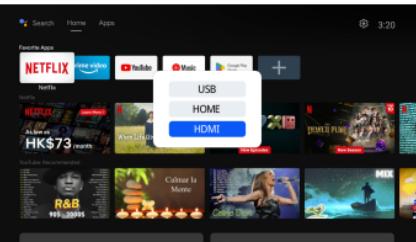

Speaker/headphone connection


Connect a 3.5mm audio cable to the projector's "audio output terminal." Connect wired speakers or headphones/earphones directly.

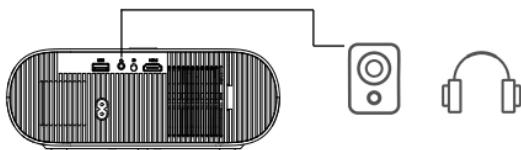


PROJECTOR INSTALLATION AND PROJECTION DISTANCE

• Desktop use

① attachment bracket

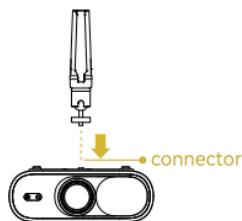

② Rotate the bracket until it is fixed.

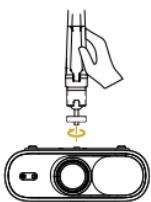


③ Installation completed




• Hanging installation and use


① Attach the projector to the mounting bracket.

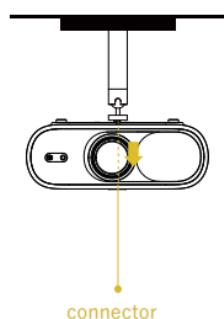


② Rotate the device and properly tighten the screws/bolts to ensure a secure fit.

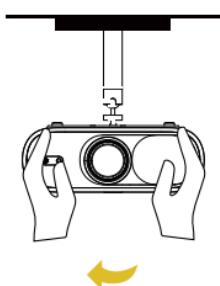

③ Installation is complete.

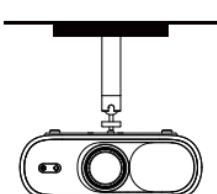

Projection distance and screen size

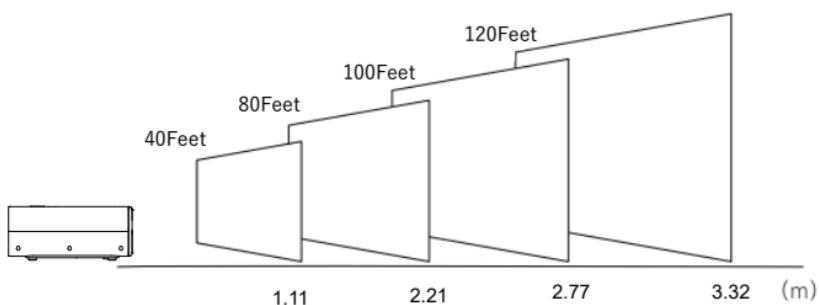


●Screw type compatible with projector: 1/4 inch screw hole

*The above mounting hardware is not included with this unit and is for reference only.

APP UP-DOWN AND SETTINGS


Home Menu



This page summarizes the app pages. If you are unable to exit the app due to network issues, please press the Home() button on the remote control to return to the Home page.

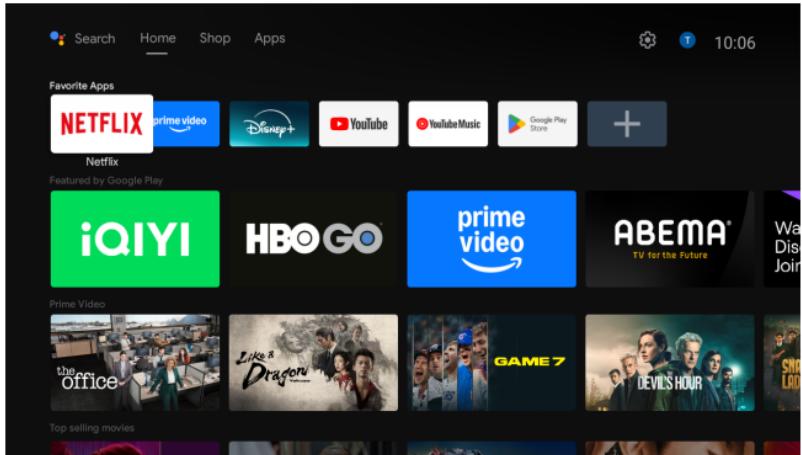

My Apps


This page will show you all the apps and software you have downloaded. You can also download any other content you need through the Google Play Store.

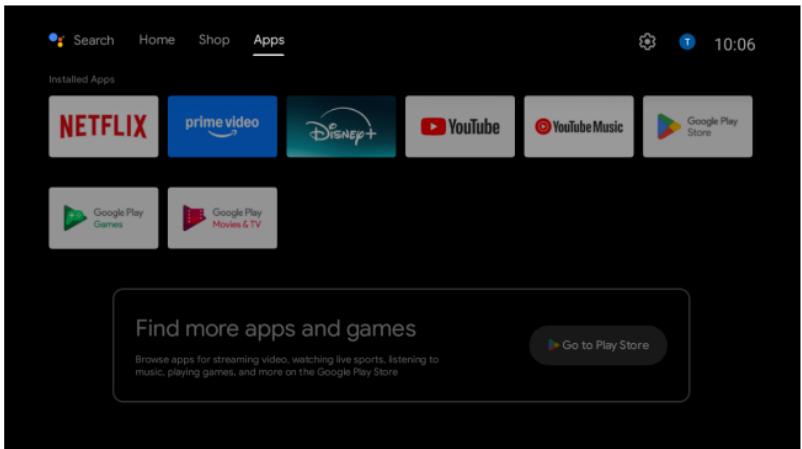

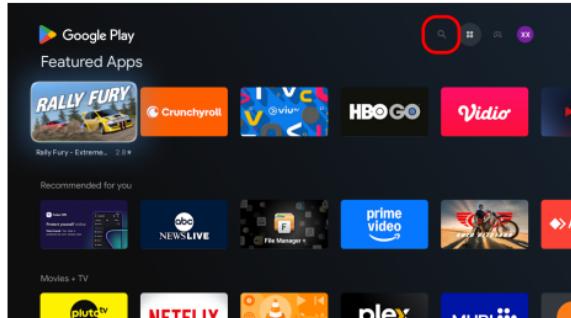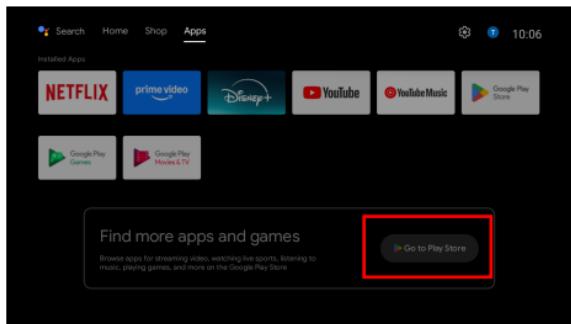



Google TV Settings

(⌚) Press the button to open the settings interface, where you can adjust all the settings related to the Google TV Store, including IP settings and application settings.

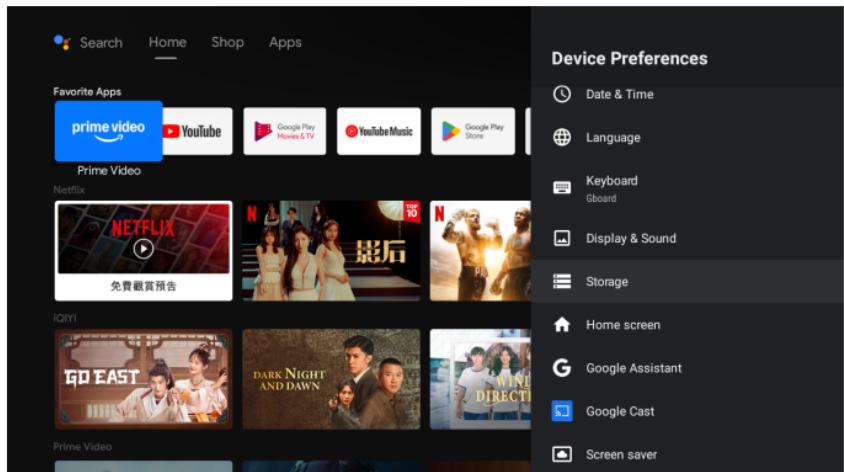

Setting parameters



Press the () button on the remote control to enter the projection settings interface, where you can change various projector-related settings parameters.

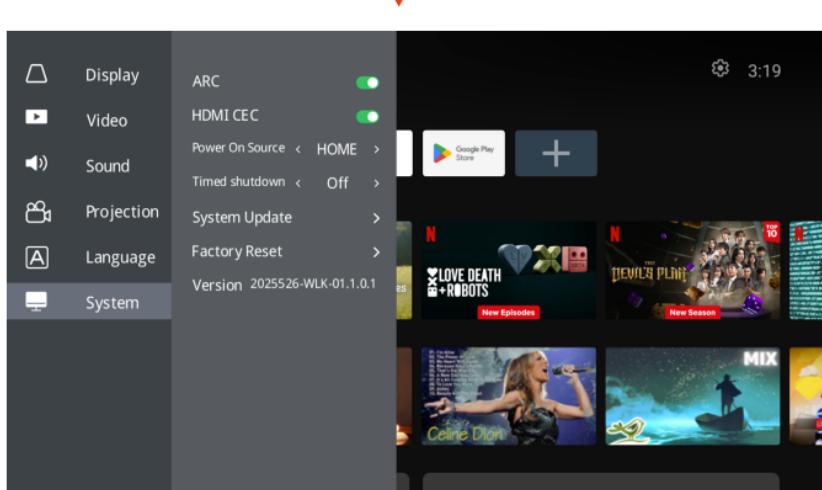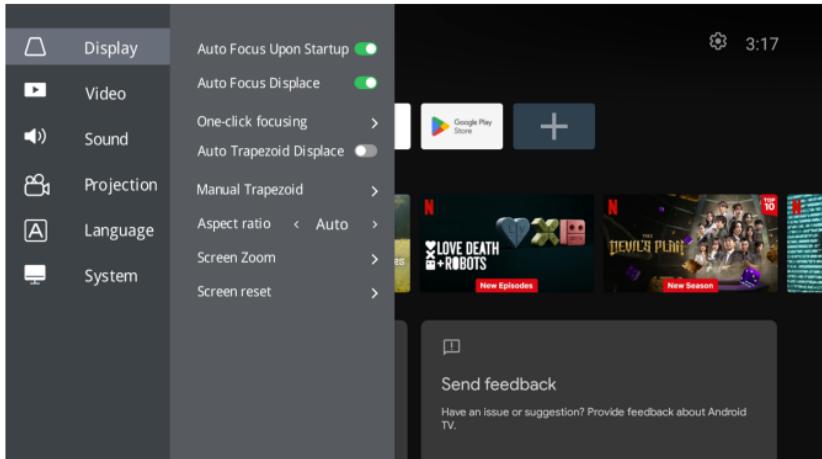

PROJECTOR IMAGE ADJUSTMENT FUNCTION

Auto Focus Function


The projector will automatically focus when powered on. Moving or shaking the projector will trigger auto-focus again. You can disable Power-On Auto Focus and Movement Auto Focus in the settings.

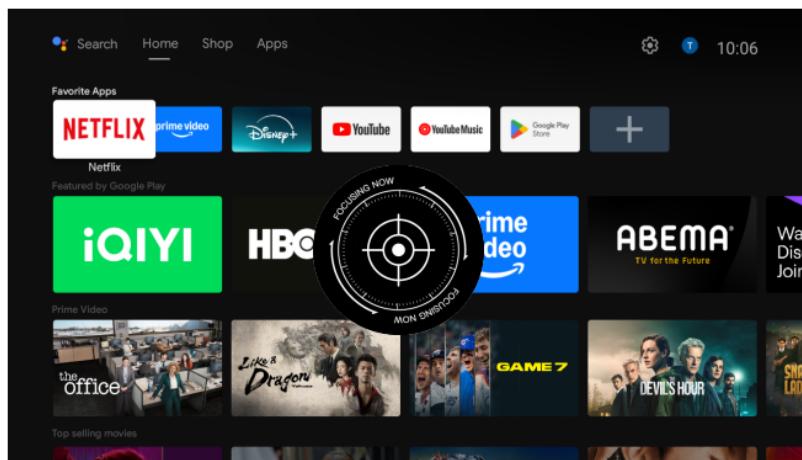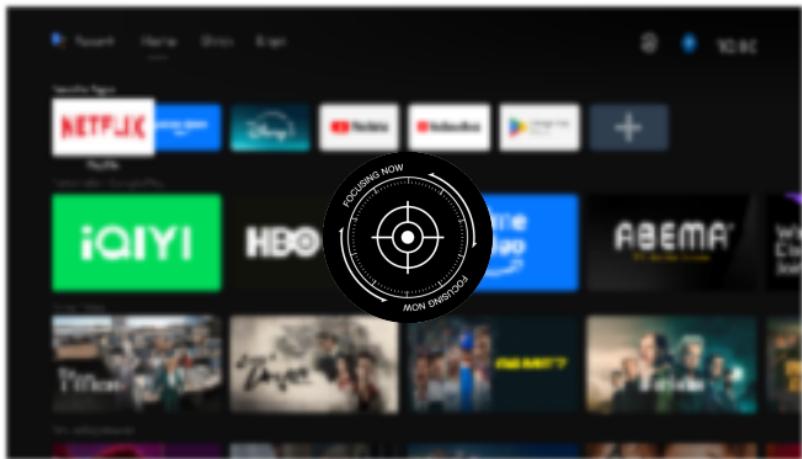

Keystone Correction

This projector supports Auto Vertical Keystone Correction and Manual 4-Point (4P) Adjustment.


Auto Vertical Keystone: Enable/disable in Settings > Display Settings.
Manual 4P Adjustment: Adjust manually in Settings > Display Settings.

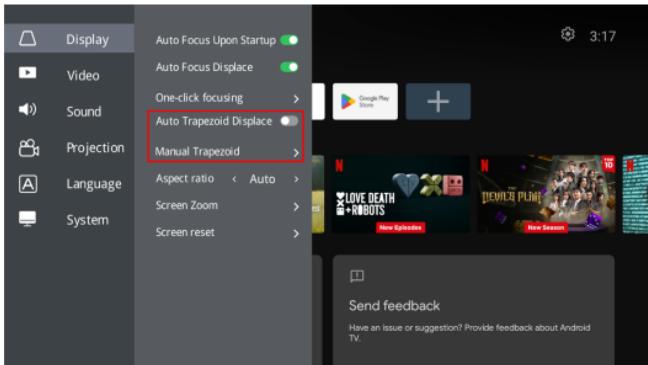

Zoom Settings

This projector supports 75% zoom scaling.

To adjust: Go to Settings > Display Settings > Zoom.

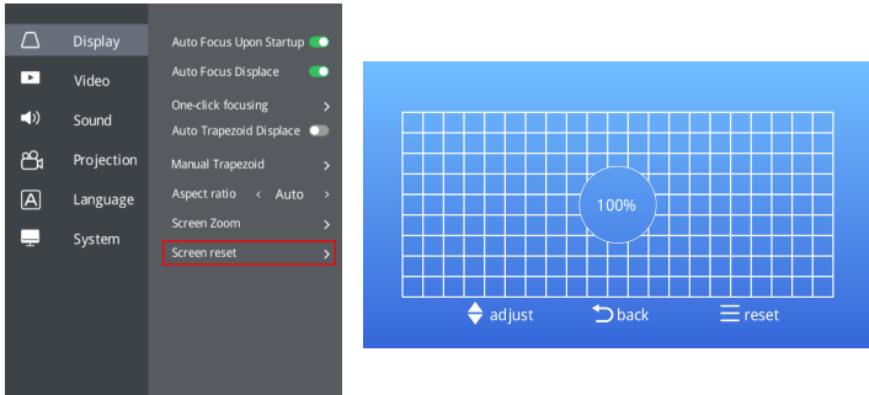

Additional Tip:



If you'd like to reduce the screen size even further, you can also adjust the zoom settings through the Google TV system interface:

1. Press the Settings (⚙️) button on the remote.
2. Go to Device Preferences > Display & Sound > Screen Position.
3. Select Zoom In Screen or Zoom Out Screen.
4. Use the center button on the remote's directional pad to zoom in or out.

WIRELESS CONNECTIVITY

Bluetooth device and remote control Bluetooth connection:

Click the remote control settings button (), open the Remotes & Accessories mode in the settings page, select Add accessory or Remote, find a compatible device or remote control to connect.

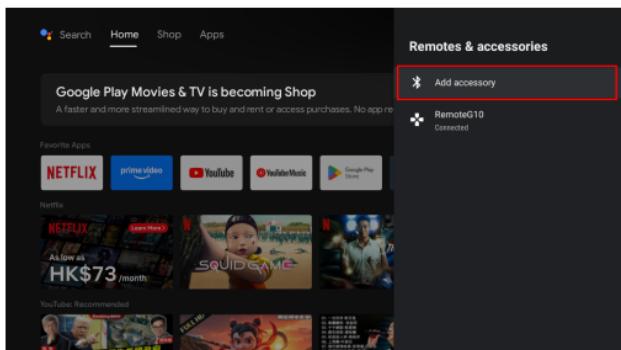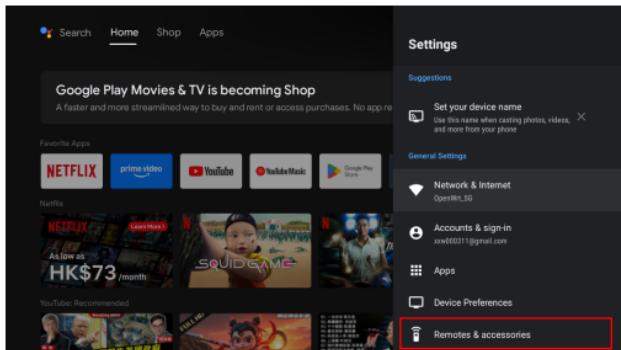

Tip

1. To watch Google TV products, you need to make sure your network is smooth, and it is recommended to use a bandwidth of more than 100Mbit.
2. Most of the problems you encounter when using Google TV APP are not projector problems, but compatibility problems with Google TV itself.
3. Due to HDCP copyright protection, wireless casting from mobile devices to LCD projectors may be restricted for services like Netflix and Hulu. For optimal viewing, we recommend using the built-in apps on your projector to stream content directly.
4. If you have any questions, please contact us on the official website of Sovboi: <https://sovboi.com>

PROJECTOR SPECIFICATIONS

Imaging Technology	LCD
Light Source Technology	LED
Resolution	1080P
Focus	automatic
Aspect Ratio	16:9 and 4:3
Power Input	100V-240V-50/60HZ
Input Terminal	USB*1/HDMI*1
Output Terminal	3.5mm Headphones
Product Size	305*118*235mm
Weight	1.8KG

*For any buyers who have any questions and contact us, we promise to give you a satisfactory solution, an extra 6 months warranty and some other surprises as a thank you for your support.

✉ <https://sovboi.com>

✉ support_us@sovboi.com

✉ support_jp@sovboi.com

FCC STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna; increase the separation between the equipment and receiver; Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

目次

よくある質問	001
梱包品の確認	003
プロジェクター各部の機能	004
リモコン各部の機能	005
クイックスタート	006
プロジェクターの画像設定	007
入力信号の切り替え	008
プロジェクターの設置と投影距離	009
アプリのダウンロードと設定	010
プロジェクターの画像調整機能	013
ワイヤレス接続方法	015
プロジェクター仕様	016



お問い合わせ

このたびはSovboiをお買い上げいただきありがとうございます。
ご使用中に何か不明点がございましたら、お気軽にお問い合わせください。
お客様での希望に沿って解決策を提供できますように努めています。

①下記のQRコードをスキャンして、Sovboiにて連絡しましょう!



②Sovboiサポートチーム

お問い合わせ先: support_jp@sovboi.com

問題をより早く解決するために、以下のテンプレートをご活用ください:

件名: 「E30Max + 注文番号」

本文: 問題の簡単な説明（例：電源が入らない）

お客様からのフィードバックが、私たちの品質向上への原動力です

*機能やアップグレードのご提案

新機能や改善のご提案がございましたら、お気軽にお知らせください。いただいた内容は、エンジニアリングチームが直接確認いたします。

*セットアップのシェアで特典をゲット

ソーシャルメディアで「#E30Max」を付けてご使用風景を投稿していただいた方には、限定特典をご用意しております。皆様の投稿を心よりお待ちしております。



SOVBOI プロジェクター操作ガイド(動画付き):

QRコードをスキャンして、ステップごとのデモをご覧ください。

Sovboi

3年間保証を有効化しましょう！

QRコードをスキャンして公式サイトにアクセスし、1分で簡単登録！

※ ご購入から7日以内に保証登録をお願いいたします。



サブスクリプション登録は不要



90日以内の無償交換対応



優先カスタマーサポート



ステップごとのビデオガイド付き



<https://sovboi.com>



Support_jp@sovboi.com



よくある質問

Q: プロジェクターは Google ストアを利用できますか?

A: はい、本製品は Google ストアをサポートしており、対応アプリを無料でダウンロードしてご利用いただけます。

Q: セットアップ方法を説明した動画はどこで見られますか?

A: YouTube にて、Wi-Fi 接続や有線接続などの操作手順を網羅した動画をご覧いただけます。YouTubeで「Sovboi」と検索してください。

Q: リモコンが反応しません。

A: 以下をご確認ください:

リモコンに新品の単4電池が2本正しく装着されているか
新旧の電池を混在させていないか（動作不良の原因になります）

Q: 言語設定はどこで変更できますか?

A: 本機は2種類のシステム（本体システムとGoogleシステム）を使用しています。それぞれ以下の方法で変更できます：

- ① 「投影設定」 > 「言語」 から本体システムの言語を変更
- ② 「アプリ設定」 > 「デバイス設定」 > 「言語」 から Google システムの言語を変更

Q: 映像がぼやけています。どうすればいいですか?

A: リモコンの「」 フォーカスボタンを押すと、自動でピント調整が行われます。また、「投影設定」 > 「ディスプレイ」 にて、電源投入時および移動時のオートフォーカス機能をオン / オフで切り替えることも可能です。

※プロジェクターと投影面（スクリーンや壁）との距離が適切であることをご確認ください。

Q: リモコンが同梱されていませんでした。送ってもらえますか?

A: 製品に付属品の不足があった場合は、お手数ですが不足しているアイテムを明記の上、下記までご連絡ください。速やかに対応させていただきます。メール窓口: support_jp@sovboi.com

Q: スマートフォンのミラーリング（画面共有）は可能ですか？

A: はい、可能ですが、スマートフォンのブランドによって操作方法が異なります：

① Google / Motorola端末の場合：スマートフォンのコントロールセンターから「画面ミラーリング」をタップし、表示されるリストから「プロジェクター名」を選択することで、直接ミラーリング接続が可能です。

② 上記以外の端末の場合：お使いのスマートフォンにミラーリング専用アプリをインストールしてください。アプリのガイドに従って接続を行ってください。

※ご注意：HDCP（著作権保護）プロトコルの制限により、すべてのLCDプロジェクターは、NetflixやHuluなどのワイヤレス再生をサポートしておりません。そのため、Netflixなどをご視聴の場合は、プロジェクター本体のシステム（アプリ）から直接ご利用いただくことを推奨しております。

Q: 初期不良の確認方法

A: 動画の再生が突然できなくなった、画像に乱れが生じた、ノイズが急に大きくななど、製品に異常を感じた場合は、まずプロジェクターの初期化をお試しください。初期化により内部設定がリセットされ、突発的に発生した不具合が解消されることがあります。改善が見られない場合は、お手数ですが販売者までご連絡ください。販売者は通常24時間以内にご返信いたしますので、ご安心ください。


Q: サウンドバーと接続できません。どうすればよいですか？

A: ① 操作手順どおりに接続が行われているか、またサウンドバーが他のデバイスと接続されていないかをご確認ください。
② 市場には多種多様なBluetoothスピーカーが存在し、一部製品は本機と互換性がない場合がございます（業界共通の課題です）。現在、互換性向上に努めています。詳細な確認手順については、メールでお問い合わせください。

Q: サポートに連絡したのに返信がありません。

A: 通常、24時間以内に返信しておりますが、迷惑メールフォルダに振り分けられている場合があります。24時間経過しても返信がない場合は、再度ご連絡いただくか、注文履歴から注文番号を確認し、【出品者】にご連絡いただけますようお願いいたします。

梱包品の確認

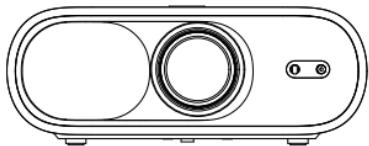

プロジェクター



リモコン



取扱説明書




HDMIケーブル




電源ケーブル

注意すべき点

おすすめ

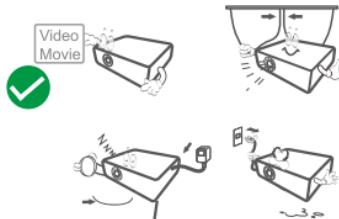


不正使用

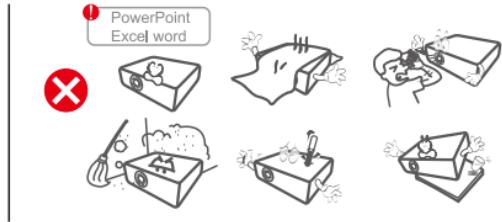


プロジェクター各部の機能


上面図

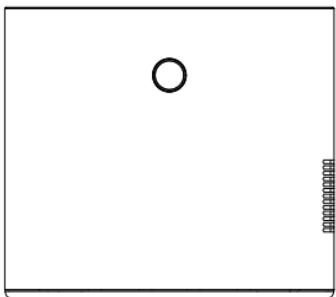


正面図

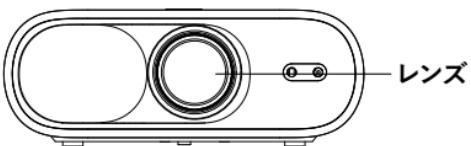

背面図

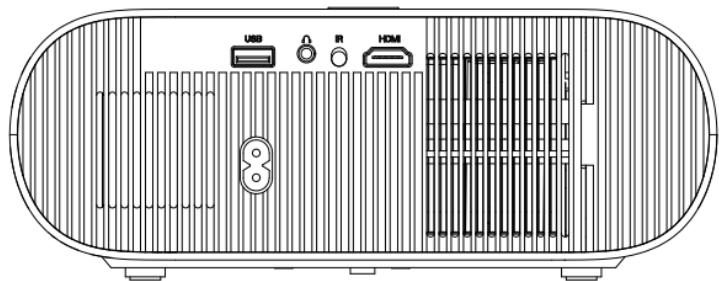

リモコン各部の機能

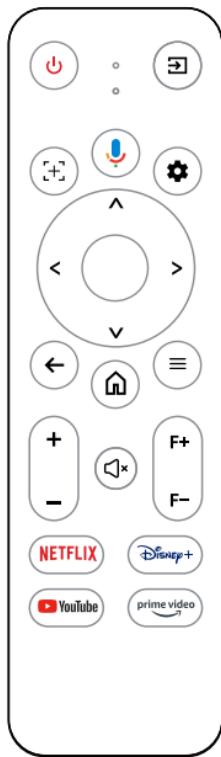


- | | |
|--------------------|-------------|
| 電源 | 投影設定 |
| 入力信号切替 | 音量調整 |
| ワンタッチフォーカス | 静音モード |
| 音声検索 | フォーカス調整 |
| アプリ設定 | YouTube |
| 方向ボタン
(上 下 左 右) | Netflix |
| 前に戻す | Prime video |
| ホーム | Disney+ |


リモコンの取り付け

- 1.リモコンをご使用になる前に、単4電池を2本正しく装着してください。
- 2.新しい電池と古い電池と一緒に使用しないでください。


クイックスタート

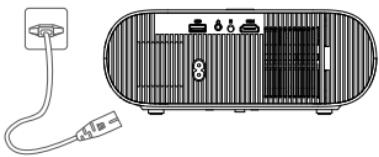

1.電源コードをコンセントに差し込む





2.プロジェクターを適切な場所に設置する

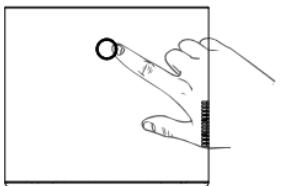

3.電源ボタンを押してプロジェクターを起動する



4.リモコンの「←」ボタンと「ホーム」ボタンを同時に長押しすると、リモコンの赤いランプが点滅し、ペアリングが開始される。

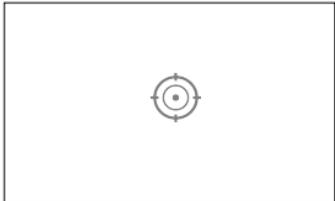

5.ワンタッチフォーカスボタンを押すと、プロジェクターはオートフォーカスを開始する。





6.ピントの微調整が必要な場合は、リモコンのフォーカスボタンを押して最適な映像に調整してください。


プロジェクターの画像設定

投影設定


リモコンのプロジェクターボタン「(≡)」を押して「投影モード」を選択し、設置方法に応じて適切な投影方式をお選びください。

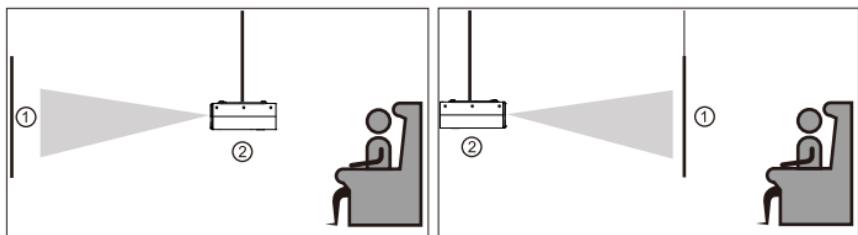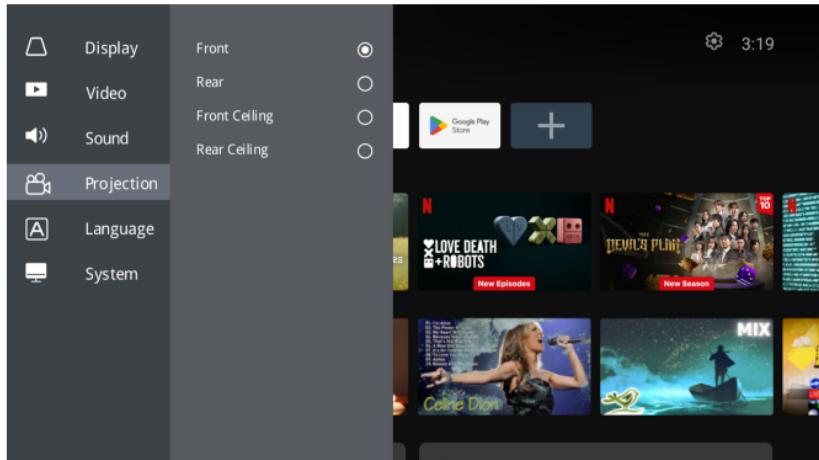


正面投影・天井取り付け

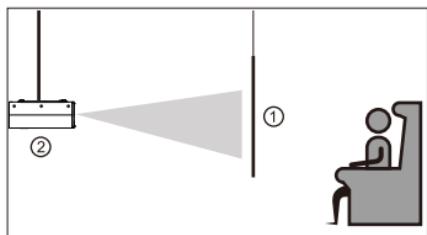

背面投影・天井取り付け

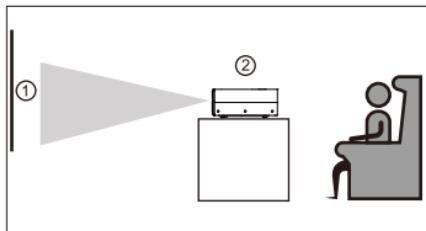

正面投影

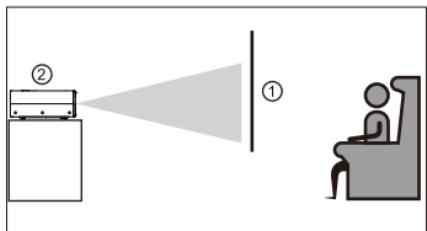


背面投影



入力信号の切り替え

リモコンの「入力信号」ボタンを押し、表示されたリストから対応する入力ソースを選択してください。

USB接続

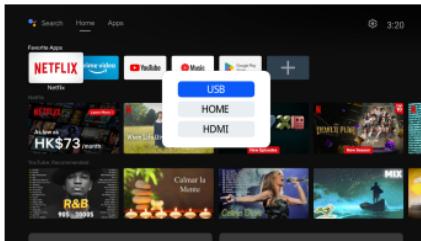


HDMI接続

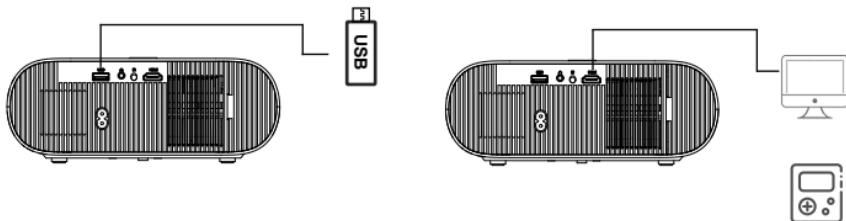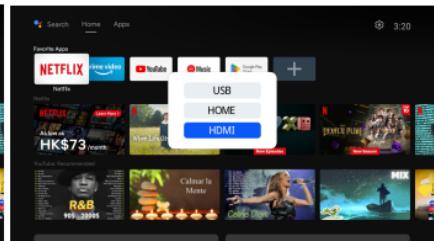

スピーカー／ヘッドフォン接続

プロジェクターの「オーディオ出力端子」に3.5mmオーディオケーブルを接続し、有線スピーカーやヘッドホン／イヤホンを直接接続してください。

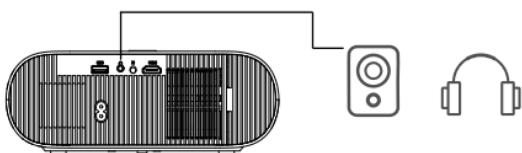


プロジェクターの設置と投影距離

・デスクトップでの使用

① 取り付けブラケット



② ブラケットをしっかりと固定されるまで回転させて取り付けてください。

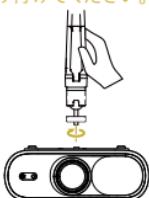


③ 設置完了です。




・吊り下げ設置と使用


① 取り付け金具にプロジェクターを取り付けます。

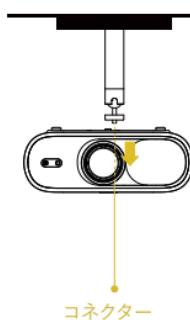


② 機器を回転させて、しっかりと固定されるようにネジやボルトを適切に締めてください。

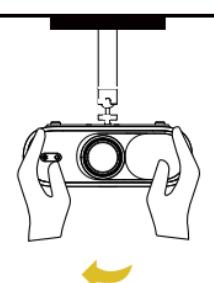

③ 設置完了です。

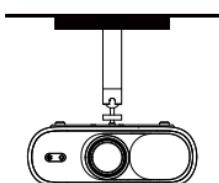

投影距離と画面サイズ

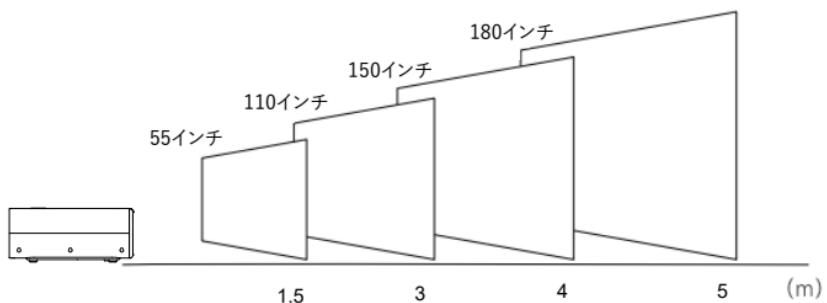


●プロジェクターのネジ穴規格:1/4インチねじ穴

※上記の取り付け金具は製品には付属しておらず、参考用のイラストとなります。

アプリのダウンロードと設定


ホームメニュー


このページには、ソフトウェアが一覧で表示されます。ネットワークの問題によりアプリが正常に終了できない場合は、リモコンの「ホーム」ボタン  を押してホーム画面に戻ってください。

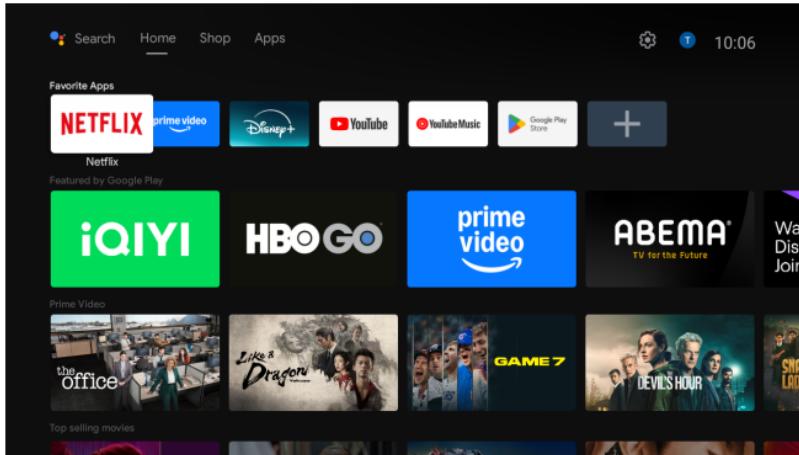

マイアプリ


このページには、ダウンロード済みのすべてのアプリやソフトウェアが表示されます。また、Google Playストアを通じて、必要なアプリやコンテンツを追加でダウンロードすることもできます。

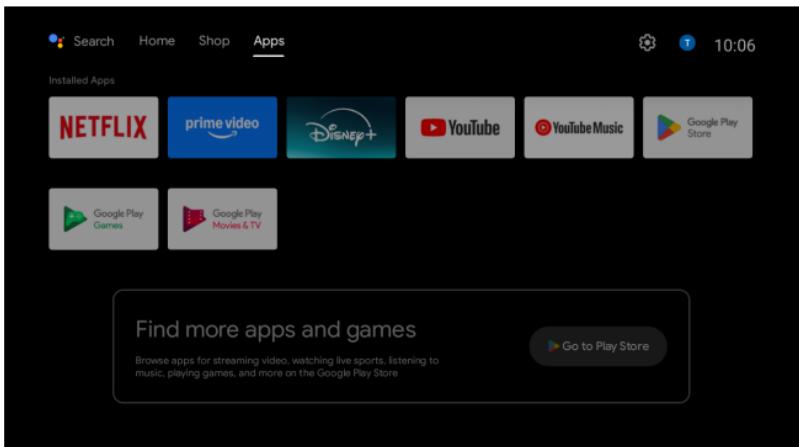

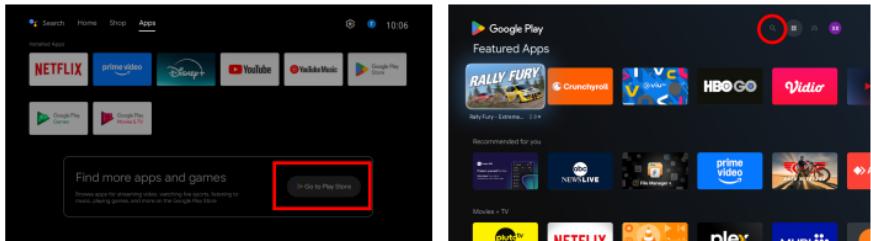



Google TV設定

リモコンまたは画面での「⚙」ボタンを押して設定画面を開きます。ここでは、IP設定やアプリ設定など、Google TVストアに関する各種設定を調整できます。

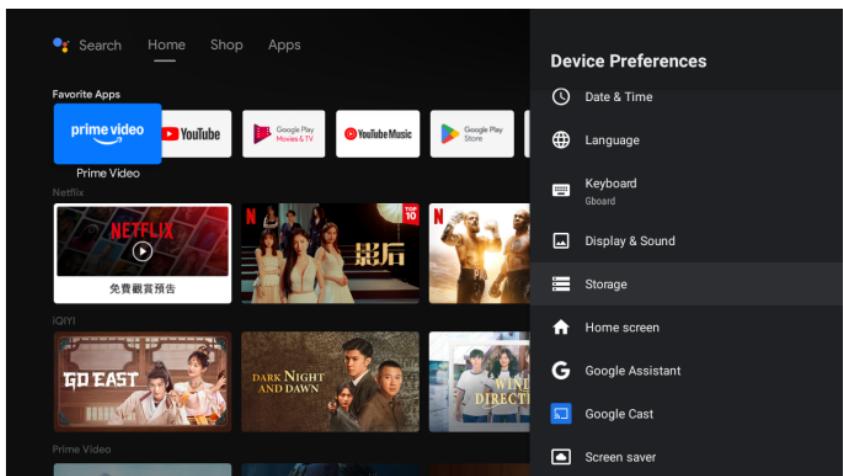

パラメータの設定



リモコンの「☰」ボタンを押して、投影設定画面を開きます。この画面では、プロジェクターに関するさまざまな設定項目を調整することができます。

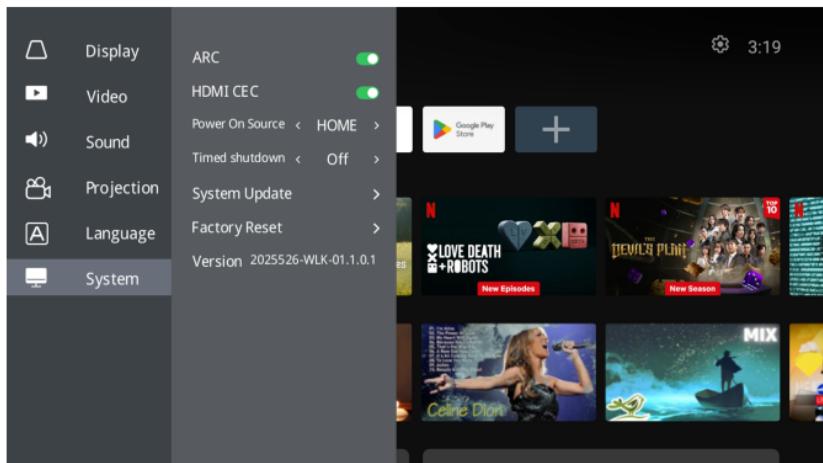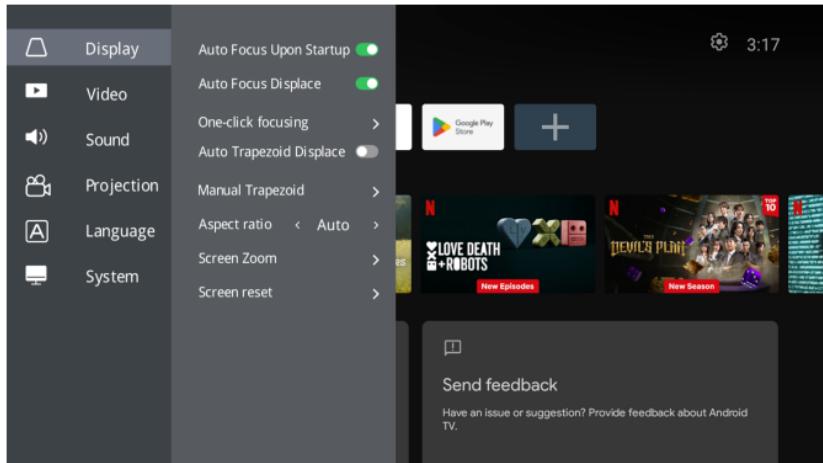

プロジェクターの画像調整機能


オートフォーカス機能

プロジェクターは、電源投入時に自動でフォーカスを調整します。プロジェクターを動かしたり振動を与えると、再度オートフォーカスが作動します。設定から、電源投入時および移動時のオートフォーカスを無効にすることも可能です。

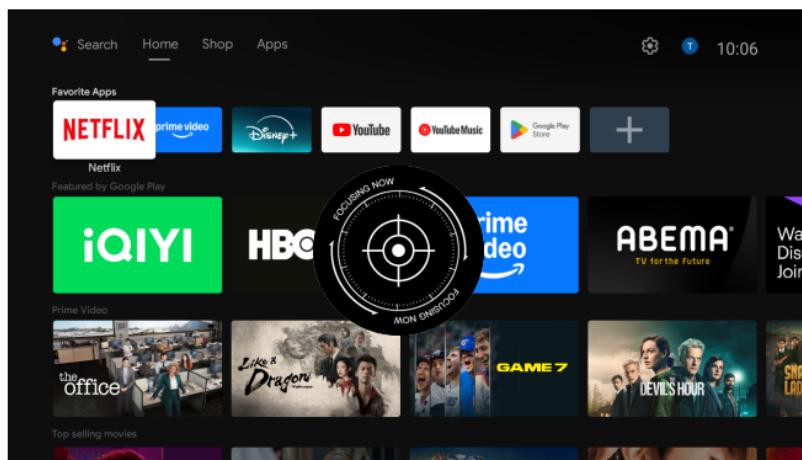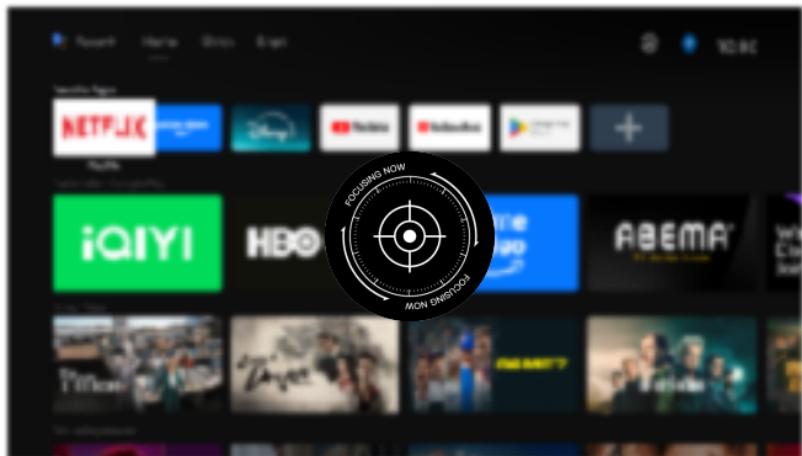

キーストーン補正

このプロジェクターは、自動上下台形補正と手動4点補正(4P)に対応しています。
自動上下台形補正:「投影設定」>「ディスプレイ設定」>「自動上下台形補正」で
有効／無効を切り替えます。手動4点補正:「投影設定」>「ディスプレイ設定」>
「手動4点補正」から調整できます。

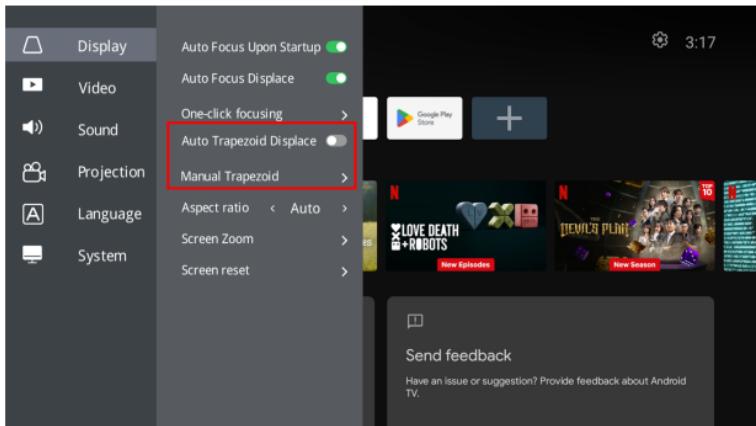

ズーム設定

本機は2種類のシステム（本体システムとGoogleシステム）を使用しています。ズーム機能は、それぞれ以下の手順で設定できます：


1.本体システムのズーム調整（最大75%）

「投影設定」>「ディスプレイ設定」>「ズーム調整」

2.Googleシステムのズーム調整（最大80%）

「アプリ設定」>「デバイス設定」>「ディスプレイと音」>「画面の位置」>「画面をズームアウト」



※両方のズーム設定を組み合わせることで、画面サイズを最大55%まで縮小することができます。

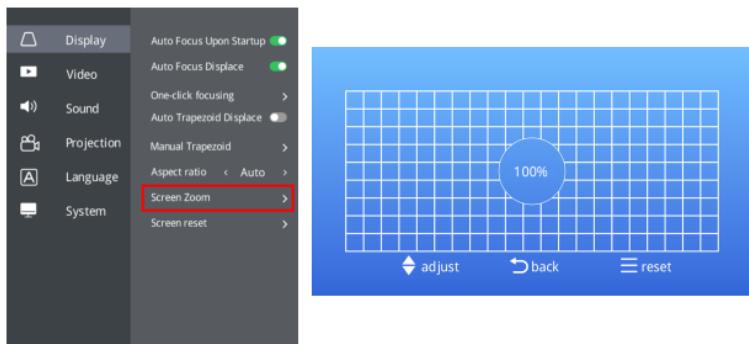

ワイヤレス接続方法

Bluetooth接続:

プロジェクターの設定画面で、「リモコンとアクセサリ」→「アクセサリを追加」を選択し、接続したいBluetoothデバイスを検出してから接続を行ってください。

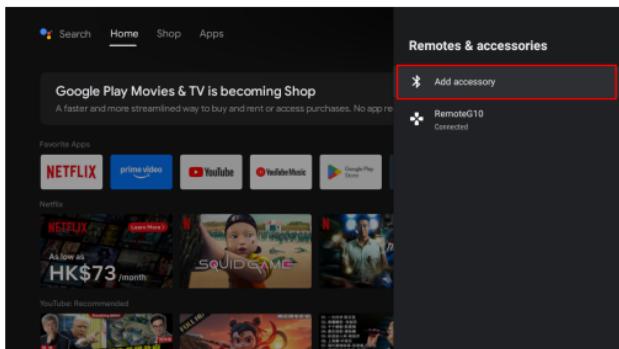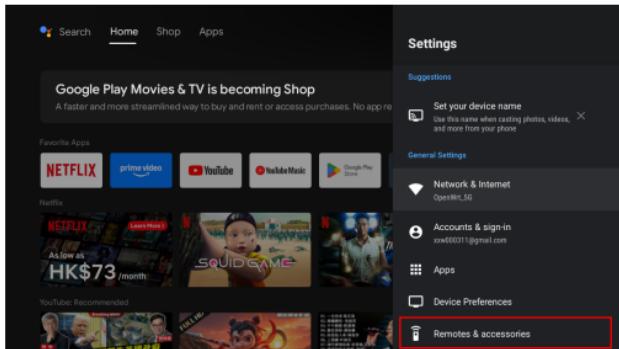

ヒント

1. Google TV製品をご利用の際は、安定したネットワーク環境を確保してください。100Mbps以上の帯域幅の使用を推奨します。
2. Google TVアプリの使用時に発生する問題の多くは、プロジェクター自体ではなく、Google TVとの互換性に起因するものです。
3. HDCPプロトコルの制限により、すべてのLCDプロジェクターでは、NetflixやHuluをワイヤレス接続で視聴することができません。プロジェクター内蔵のシステム（アプリ）から直接Netflixなどのアプリを視聴することをお勧めします。
4. ご不明な点がございましたら、<https://sovboi.com> より Sovboiまでお問い合わせください。

プロジェクトー仕様

画像技術	LCD
光源技術	LED
解像度	1080P
フォーカス	自動
アスペクト比	16:9 / 4:3
電源入力	100V-240V-50/60HZ
入力端子	USB*1/HDMI*1
出力端子	3.5mmヘッドフォン
本体サイズ	305*118*235mm
重量	1.8KG

ご不明な点がございましたら、以下のいずれかの連絡先までお問い合わせください：

④ <https://sovboi.com>

✉ support_jp@sovboi.com

sovboi

🌐 <https://sovboi.com>

✉️ support_us@sovboi.com

✉️ support_jp@sovboi.com